FS-A75

PICMG1.3 Full-size CPU Card

User's Manual

Edition 1.6 2018/01/24



Copyright

Copyright 2011, all rights reserved. This document is copyrighted and all rights are reserved. The information in this document is subject to change without prior notice to make improvements to the products.

This document contains proprietary information and protected by copyright. No part of this document may be reproduced, copied, or translated in any form or any means without prior written permission of the manufacturer.

All trademarks and/or registered trademarks contains in this document are property of their respective owners.

Disclaimer

The company shall not be liable for any incidental or consequential damages resulting from the performance or use of this product.

The company does not issue a warranty of any kind, express or implied, including without limitation implied warranties of merchantability or fitness for a particular purpose. The company has the right to revise the manual or include changes in the specifications of the product described within it at any time without notice and without obligation to notify any person of such revision or changes.

Trademark

All trademarks are the property of their respective holders.


Any questions please visit our website at .http://www.commell.com.tw.

Packing List:

Please check the package content before you starting using the board.

Hardware:

FS-A75 PICMG1.3 Full-size CPU Card motherboard x 1

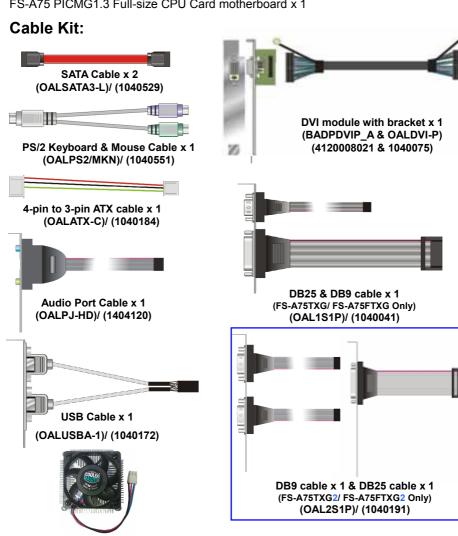

Printed Matters:

CPU Cooler x 1 (OHS-P-M-H)/ (1190058)

Driver CD (Including User's Manual) x 1

Index

| Chapter 1 <introduction></introduction> | 6 |
|---|----|
| 1.1 <product overview=""></product> | 6 |
| 1.2 <product specification=""></product> | 7 |
| 1.3 <mechanical drawing=""></mechanical> | 9 |
| 1.4 <block diagram=""></block> | 10 |
| Chapter 2 <hardware setup=""></hardware> | 11 |
| 2.1 <connector location=""></connector> | 11 |
| 2.2 <jumper &="" location="" reference=""></jumper> | 12 |
| 2.3 <connector reference=""></connector> | 13 |
| 2.3.1 <internal connectors=""></internal> | 13 |
| 2.3.2 <external connectors=""></external> | 13 |
| 2.4 <cpu and="" memory="" setup=""></cpu> | 14 |
| 2.4.1 <cpu setup=""></cpu> | 14 |
| 2.4.2 <memory setup=""></memory> | 15 |
| 2.5 <cmos &="" atx="" setup=""></cmos> | 16 |
| 2.6 <serial ata="" interface=""></serial> | 17 |
| 2.7 <ethernet interface=""></ethernet> | 18 |
| 2.8 <onboard display="" interface=""></onboard> | 19 |
| 2.8.1 <analog display=""></analog> | 19 |
| 2.8.2 <digital display=""></digital> | 20 |
| 2.8.3 <dvi interface=""></dvi> | 25 |
| 2.9 <integrated audio="" interface=""></integrated> | 26 |
| 2.10 <usb interface=""></usb> | 28 |
| 2.11 <serial port=""></serial> | 30 |
| 2.12 <pcie and="" card="" interface="" mini="" sim=""></pcie> | 33 |
| 2.13 <gpio and="" interface="" smbus=""></gpio> | 34 |
| 2.14 < Power Supply and Fan Interface > | 35 |
| 2.15 <switch and="" indicator=""></switch> | 37 |
| Chapter 3 <system setup=""></system> | 38 |

FS-A75 User's Manual

| 3.1 <audio configuration=""></audio> | 38 |
|---|----|
| 3.2 < Display Properties Setting > | 39 |
| 3.3 <sata configuration=""></sata> | 41 |
| 3.4 <sata configuration="" raid=""></sata> | 42 |
| Chapter 4 <bios setup=""></bios> | 44 |
| Appendix A <i assignment="" o="" pin="" port=""></i> | 46 |
| A.1 <serial ata="" port=""></serial> | 46 |
| A.2 <irda port=""></irda> | 46 |
| A.3 <vga port=""></vga> | 46 |
| A.4 <lan port=""></lan> | 46 |
| A.5 <lan led="" port=""></lan> | 47 |
| A.6 <parallel port=""></parallel> | 47 |
| Appendix B <flash bios=""></flash> | 48 |
| B.1 <flash tool=""></flash> | 48 |
| B.2 <flash bios="" procedure=""></flash> | 48 |
| Appendix C <system resources=""></system> | 49 |
| C.1 <i address="" map="" o="" port=""></i> | 49 |
| C.2 <memory address="" map=""></memory> | 52 |
| C.3 <system &="" dma="" irq="" resources=""></system> | 53 |
| Appendix D <programming gpio's=""></programming> | 54 |
| Appendix E <programming timer="" watchdog=""></programming> | 55 |
| Contact Information | 56 |

FS-A75 User's Manual (This page is left for blank)

Chapter 1 < Introduction>

1.1 < Product Overview>

FS-A75 the 2nd Generation Intel of the PICMG1.3 Full-size CPU Card motherboard, supports 2nd Generation Intel® Core™ i7, Core™ i5, Core™ i3 and Celeron® Mobile Processor and features Intel QM67 chipset, integrated HD Graphics, DDR3 memory, REALTEK High Definition Audio, Serial ATA with RAID function for a system and Intel Gigabit LAN.

Intel Sandy Bridge Processor

The 2nd Generation Intel® Core™ processor family mobile is the next generation of 64-bit, multi-core mobile processor built on 32- nanometer process technology. Based on a new micro-architecture.

New features for Intel QM67 chipset

The board integrates Intel QM67 chipset, supports integrated HD Graphics, built-in high speed mass storage interface of Serial ATA interface with RAID function, High Definition Audio with 2 channels surrounding sound.

All in One multimedia solution

Based on Intel QM67 chipset, the board provides high performance onboard graphics, 24-bit dual channel LVDS interface, DVI and 2 channels High Definition Audio, to meet the very requirement of the multimedia application.

1.2 < Product Specification >


| General Specific | ation |
|----------------------|---|
| Form Factor | PICMG 1.3 Full-size CPU Card |
| CPU | 2 nd Generation Intel® Core™ i7, Core™ i5, Core™ i3 and Celeron® |
| | Mobile Processor |
| | Package type: rPGA988B |
| Memory | 2 x DDRIII SO-DIMM 1066/1333/1600 MHz up to 16GB |
| | Support Non-ECC, unbuffered memory only |
| Chipset | Intel QM67 |
| Real Time Clock | Chipset integrated RTC with onboard lithium battery |
| Watchdog Timer | Generates a system reset with internal timer for 1min/s ~255min/s |
| Power Management | Supports ACPI 3.0 compliant, |
| Serial ATA Interface | 4 x serial ATAII interface with 300MB/s transfer rate |
| | 2 x serial ATAIII interface with 600MB/s transfer rate |
| | Support RAID 0, 1, 5, 10 and Intel Rapid Storage Technology |
| VGA Interface | Onboard DSUB15 connector for VGA interface |
| LVDS Interface | Onboard 24-bit dual channel LVDS connector with +3.3V/+5V/+12V |
| | supply |
| DVI Interface | Chrontel CH7318 Transmitter with 26-pin DVI connector |
| Audio Interface | Realtek ALC888 HD Audio |
| LAN Interface | 2 x Intel 82574L Gigabit LAN |
| GPIO interface | Onboard programmable 8-bit Digital I/O interface |
| Extended Interface | PICMG 1.3 Interface Support 1 PCI-Express x16 and 1 PCI-Express x4 |
| | or 4 PCI-Express x1 4 PCI bus master, and 4 USB2.0 Interface |
| | and 1 x PCIE mini card socket |
| Internal I/O Port | 5x RS232, 1 x RS232/422/485, 1 x SMBUS, 1 x GPIO, 8 x USB 2.0, 1 x |
| | IrDA, 1 x LVDS,1 x LPT, 6 x Serial ATA, 1 x LCD inverter, |
| | 1 x Front panel Audio and 1 x CDIN |
| External I/O Port | DB15 VGA port, RJ45 LAN port, PS/2 Keyboard/Mouse Port |
| Power Requirement | +5V, +12 DC input & 5V _{SB} Requirement |
| Dimension | 338 mm x 126 mm (L x W) |
| Temperature | Operating within 0~60 centigrade |
| | Storage within –20~85 centigrade |

| Ordering Code | |
|---------------|---|
| FS-A75TXG | Intel PGA988B+ QM67 Onboard VGA, LVDS, DVI, USB2.0, COM, HD |
| | Audio, SATAII, SATAIII, SMBUS, LPC, IrDA, GPIO and PCI Express mini |
| | card, 1 x Giga LAN |
| | Support Four X1 & One X16 PCI Express interface |
| FS-A75FTXG | Intel PGA988B+ QM67 Onboard VGA, LVDS, DVI, USB2.0, COM, HD |
| | Audio, SATAII, SATAIII, SMBUS, LPC, IrDA, GPIO and PCI Express mini |
| | card, 1 x Giga LAN |
| | Support One X4 & One X16 PCI Express interface |
| FS-A75TXG2 | Intel PGA988B+ QM67 Onboard VGA, LVDS, DVI, USB2.0, COM, HD |
| | Audio, SATAII, SATAIII, SMBUS, LPC, IrDA, GPIO and PCI Express mini |
| | card, 2 x Giga LAN |
| | Support Four X1 & One X16 PCI Express interface |
| FS-A75FTXG2 | Intel PGA988B+ QM67 Onboard VGA, LVDS, DVI, USB2.0, COM, HD |
| | Audio, SATAII, SATAIII, SMBUS, LPC, IrDA, GPIO and PCI Express mini |
| | card, 2 x Giga LAN |
| | Support One X4 & One X16 PCI Express interface |

The specifications may be different as the actual production.


For further product information please visit the website at .http://www.commell.com.tw.

1.3 < Mechanical Drawing>

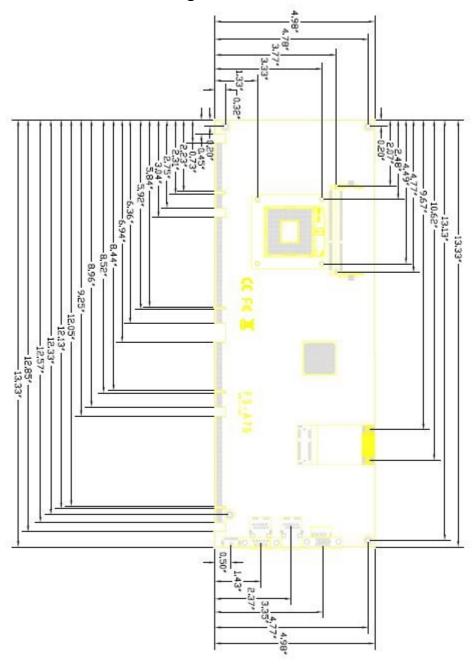


Unit: inch

1.4 <Block Diagram>

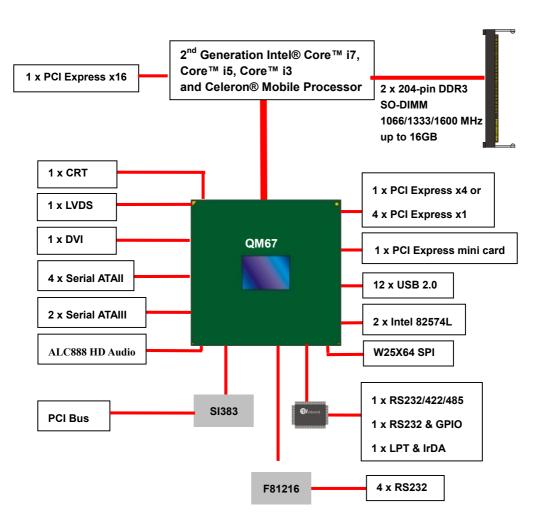


Chapter 2 < Hardware Setup>

2.1 <Connector Location>

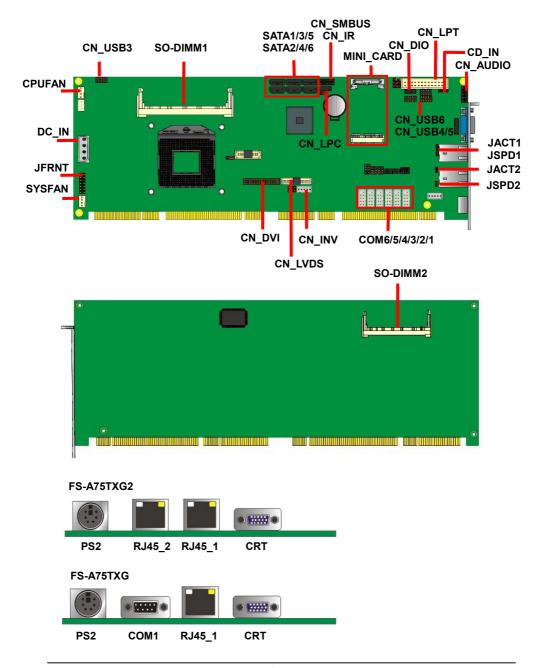

2.2 < Jumper Location & Reference>

| Jumper | Function |
|--------|------------------------------------|
| JRTC | CMOS Operating/Clear Setting |
| JVLCD | Panel Voltage Setting |
| JAT | Power mode select |
| JP1 | Com1 Voltage Setting (For Pin 9) |
| JP2 | Com2 Voltage Setting (For Pin 9) |
| JP3 | Com3 Voltage Setting (For Pin 9) |
| JP4 | Com4 Voltage Setting (For Pin 9) |
| JCSEL1 | CN_COM2 RS-232 RS422 RS485 Setting |
| JCSEL2 | CN_IR IrDA Setting |
| JVUSB | USB Voltage Setting |

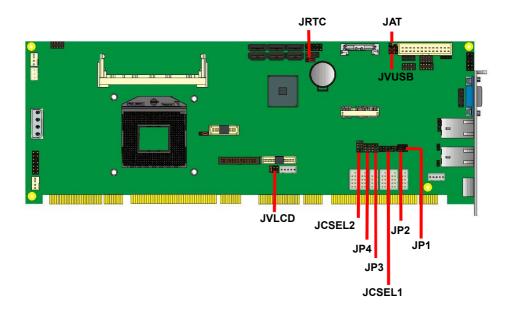

2.3 <Connector Reference>

2.3.1 <Internal Connectors>

| Connector | Function | Remark |
|--------------------|---|--------|
| CPU | Socket rPGA988B for PGA988 CPU | |
| SO-DIMM 1/2 | 204 -pin DDR3 SO-DIMM socket | |
| SATA 1/2 | 7-pin Serial ATAIII connector | |
| SATA 3/4/5/6 | 7-pin Serial ATAII connector | |
| DC_IN | 4-pin power supply connector | |
| CN_AUDIO | 5 x 2-pin audio connector | |
| CD_IN | 4-pin CD-ROM audio input connector | |
| CN_DIO | 6 x 2-pin digital I/O connector | |
| CN_USB 3/4/5/6 | 5 x 2-pin USB connector | |
| CPUFAN | 4-pin CPU cooler fan connector | |
| SYSFAN | 3-pin system cooler fan connector | |
| CN_LVDS | 20 x 2-pin LVDS connector | |
| CN_INV | 5-pin LCD inverter connector | |
| CN_IR | 5-pin IrDA connector | |
| CN_COM 1/2/3/4/5/6 | 9-pin RS232 | |
| CN_LPC | 5 x 2-pin LPC connector | |
| JFRNT | 14-pin front panel switch/indicator connector | |
| Mini-PCIE | 2 x 52-pin Mini-PCIE socket | |
| JAT | Power mode select | |
| CN_LPT | 13 x 2-pin printer connector | |
| JSPD 1/2 | LAN Speed LED connector | |
| JACT 1/2 | LAN Activity LED connector | |

2.3.2 <External Connectors>

| Connector | Function | Remark |
|-----------|-----------------------------------|--------|
| RJ45 1/2 | 1 x RJ45 LAN connector | |
| CRT | DB15 and analog VGA connector | |
| PS/2 | PS/2 keyboard and mouse connector | |


2.4 < CPU and Memory Setup>

2.4.1 < CPU Setup>

The board comes with the socket rPGA988 for Intel **SandyBridge** Processor, Please follow the instruction to install the CPU properly.





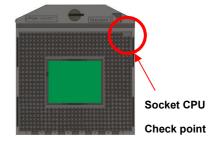

1. Use the flat-type screw drive to unlock the CPU socket

2. Follow the pin direction to install the processor on the socket





3. Lock the socket

2.4.2 <Memory Setup>

The board provides 2 x 204-pin DDR3 SO-DIMM to support 1066/1333/1600MHz DDR3 memory module up to 16GB.

Support Non-ECC, unbuffered memory only.

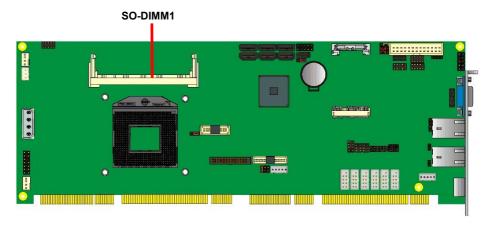

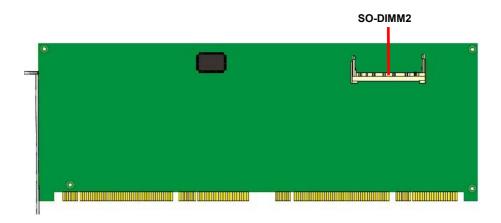

2.5 < CMOS & ATX Setup>

The board's data of CMOS can be setting in BIOS. If the board refuses to boot due to inappropriate CMOS settings, here is how to proceed to clear (reset) the CMOS to its default values.

Jumper: JRTC

Type: Onboard 3-pin jumper

| JRTC | Mode |
|------|------------------|
| 1-2 | Clear CMOS |
| 2-3 | Normal Operation |


Default setting: 2-3

Jumper: JAT

Type: onboard 3-pin jumper

| JAT | Mode |
|-----|----------|
| 1-2 | AT Mode |
| 2-3 | ATX Mode |

Default setting:2-3

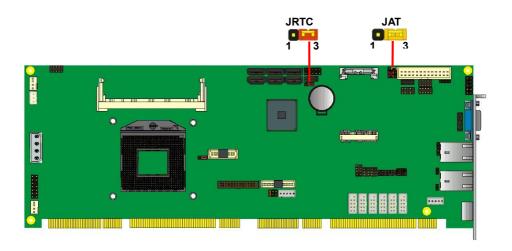


2.6 <Serial ATA Interface>

FS-A75 has Four Serial ATA II (SATA Port3/4/5/6) & Two Serial ATA III (SATA Port1/2) interfaces with RAID function, the transfer rate of the Serial ATA II can be up to 300MB/s & Serial ATA III can be up to 600MB/s. Please go to http://www.serialata.org/ for more about Serial ATA technology information. Based on Intel® PCH, it supports Intel® Matrix Storage Technology with combination of RAID 0,1,5 and 10. The main features of RAID on Intel® QM67 PCH are listed below:

- 1. Supports for up to RAID volumes on a single, two-hard drive RAID array.
- 2. Supports for two, two-hard drive RAID arrays on any of six Serial ATA ports.
- 3. Supports for Serial ATA ATAPI devices.
- 4. Supports for RAID spares and automatic rebuild.
- 5. Supports on RAID arrays, including NCQ and native hot plug.


For more information please visit Intel's official website.

For more about the system setup for Serial ATA, please check the chapter of SATA configuration.

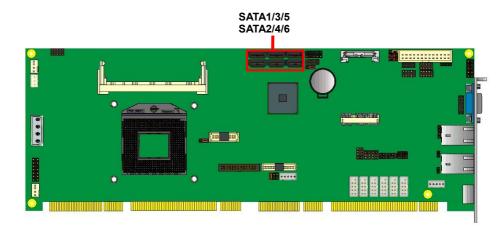

2.7 < Ethernet Interface >

The board integrates with two Intel PCI Express Gigabit Ethernet controllers, as the PCI Express x1 can speed up to 250MB/s of transfer rate instead of late PCI bus with 133MB/s of transfer rate. The Intel Gigabit Ethernet supports triple speed of 10/100/1000Base-T, with IEEE802.3 compliance and Wake-On-LAN supported.

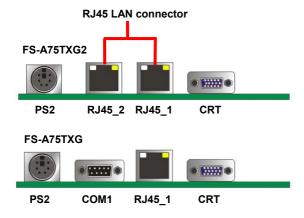


2.8 <Onboard Display Interface>

Based on Intel Sandy Bridge CPU with built-in HD Graphic, the board provides one DB15 connector on real external I/O port, one 40-pin LVDS interface with 5-pin LCD backlight inverter connector and provides 26-pin DVI interface.

The board provides dual display function with clone mode and extended desktop mode for CRT, LCD and DVI.


2.8.1 < Analog Display>

Please connect your CRT or LCD monitor with DB15 male connector to the onboard DB15 female connector on rear I/O port .

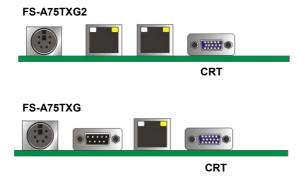

2.8.2 < Digital Display>

The board provides one 40-pin LVDS connector for 24-bit single/dual channel panels, supports up to 2048 x 1536 (UXGA) resolution, with one LCD backlight inverter connector and one jumper for panel voltage setting.

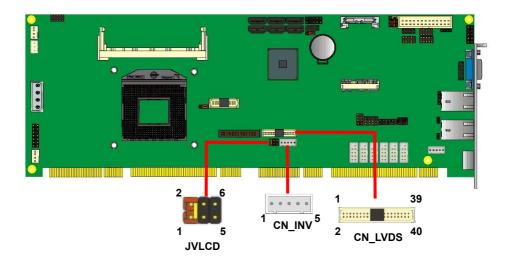

Effective patterns of connection: 1-2/3-4/5-6



Warning: others cause damages

Connector: CN_INV

Type: 5-pin LVDS Power Header

| . 7 | | |
|-----|-----------------|--|
| Pin | Description | |
| 1 | +12V | |
| 2 | Reserved (Note) | |
| 3 | GND | |
| 4 | GND | |
| 5 | ENABKL | |

Note: Reserved for MB internal test Please treat it as NC Connector: JVLCD

Type: 6-pin Power select Header

| Pin | Description |
|-----|---------------|
| 1-2 | LCDVCC (3.3V) |
| 3-4 | LCDVCC (5V) |
| 5-6 | LCDVCC (12V) |

Default: 1-2

Connector: CN_LVDS

Type: onboard 40-pin connector for LVDS connector

Connector model:

E&T 3950-B40C-00R or similar (HIROSE DF13-40DP-1.25V compatible)

| <u> </u> | -0011 or similar (Miltoo | <u> </u> | .zev oempatible) |
|----------|--------------------------|----------|------------------|
| Pin | Signal | Pin | Signal |
| 2 | LCDVCC | 1 | LCDVCC |
| 4 | GND | 3 | GND |
| 6 | ATX0- | 5 | BTX0- |
| 8 | ATX0+ | 7 | BTX0+ |
| 10 | GND | 9 | GND |
| 12 | ATX1- | 11 | BTX1- |
| 14 | ATX1+ | 13 | BTX1+ |
| 16 | GND | 15 | GND |
| 18 | ATX2- | 17 | BTX2- |
| 20 | ATX2+ | 19 | BTX2+ |
| 22 | GND | 21 | GND |
| 24 | ACLK- | 23 | BTX3- |
| 26 | ACLK+ | 25 | BTX3+ |
| 28 | GND | 27 | GND |
| 30 | ATX3- | 29 | BCLK- |
| 32 | ATX3+ | 31 | BCLK+ |
| 34 | GND | 33 | GND |
| 36 | DDCPCLK | 35 | SMBCKL |
| 38 | DDCPDATA | 37 | SMBDATA |
| 40 | N/C | 39 | SPDIFO |

FS-A75 User's Manual


To setup the LCD, you need the component below:

- 1. A panel with LVDS interfaces.
- 2. An inverter for panel's backlight power.
- 3. A LCD cable and an inverter cable.

For the cables, please follow the pin assignment of the connector to make a cable, because every panel has its own pin assignment, so we do not provide a standard cable; please find a local cable manufacture to make cables.

LCD Installation Guide:


1. Preparing the FS-A75, LCD panel and the backlight inverter.

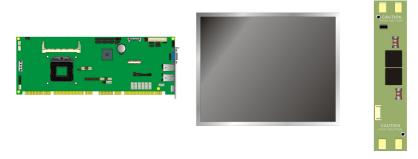

- 2. Please check the datasheet of the panel to see the voltage of the panel, and set the jumper **JVLCD** to +12V or +5V or +3.3V.
- 3. You would need a LVDS type cable.



4. To connect all of the devices well.

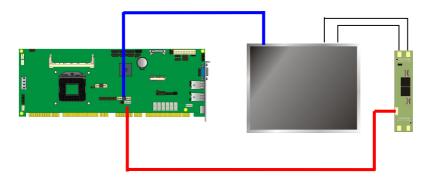


FS-A75 User's Manual

After setup the devices well, you need to select the LCD panel type in the BIOS.

The panel type mapping is list below:

| | BIOS panel type selection form (BIOS Version:1.0) | | | |
|-----|---|-----|-----------------------|--|
| | Single / Dual channel | | Single / Dual channel | |
| NO. | Output format | NO. | Output format | |
| 1 | 640 x 480 | 9 | 1680 x 1050 | |
| 2 | 800 x 600 | 10 | 1920 x 1200 | |
| 3 | 1024 x 768 | 11 | 1440 x 900 | |
| 4 | 1280 x 1024 | 12 | 1600 x 900 | |
| 5 | 1400 x 1050 Reduced Blanking | 13 | ОЕМ Кеер | |
| 6 | 1400 x 1050 non-Reduced Blanking | 14 | 1280 x 800 | |
| 7 | 1600 x 1200 | 15 | 1920 x 1080 | |
| 8 | 1366 x 768 | 16 | 2048 x 1536 | |

| | BIOS panel type selection form (BIOS Version: 2.0) | | | | |
|-----|--|-----|-----------------------|--|--|
| | Single / Dual channel | | Single / Dual channel | | |
| NO. | Output format | NO. | Output format | | |
| 1 | 640 x 480 | 9 | 1680 x 1050 | | |
| 2 | 800 x 600 | 10 | 1920 x 1200 | | |
| 3 | 1024 x 768 | 11 | 1440 x 900 | | |
| 4 | 1280 x 1024 | 12 | 1600 x 900 | | |
| 5 | 1400 x 1050 Reduced Blanking | 13 | 800 x 480 | | |
| 6 | 1400 x 1050 non-Reduced Blanking | 14 | 1280 x 800 | | |
| 7 | 1600 x 1200 | 15 | 1920 x 1080 | | |
| 8 | 1366 x 768 | 16 | OEM Keep | | |

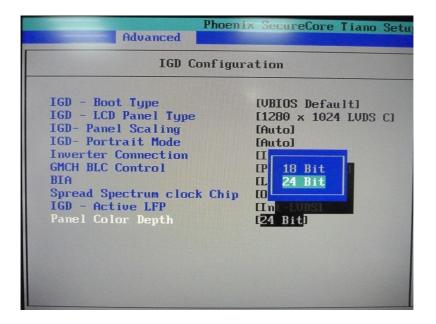


2.8.3 <DVI Interface>

Connector: CN_DVI

Connector type: 26-pin header connector (pitch = 2.00mm)

| Pin Number | Assignment | Pin Number | Assignment |
|------------|------------|------------|------------|
| 1 | TX1+ | 2 | TX1- |
| 3 | Ground | 4 | Ground |
| 5 | TXC+ | 6 | TXC- |
| 7 | Ground | 8 | PVDD |
| 9 | N/C | 10 | N/C |
| 11 | TX2+ | 12 | TX2- |
| 13 | Ground | 14 | Ground |
| 15 | TX0+ | 16 | TX0- |
| 17 | N/C | 18 | HPDET |
| 19 | DDCDATA | 20 | DDCCLK |
| 21 | GND | 22 | N/C |
| 23 | N/C | 24 | N/C |
| 25 | N/C | 26 | N/C |

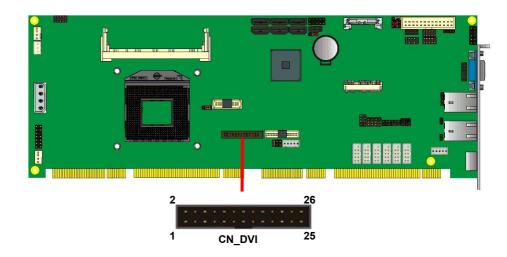


2.9 < Integrated Audio Interface>

The board integrates onboard audio interface with REALTEK ALC888 code, with Intel next generation of audio standard as High Definition Audio, it offers more vivid sound and other advantages than former HD audio compliance.

The main specifications of ALC888 are:

- High-performance DACs with 100dB S/N ratio
- 2 DAC channels support 16/20/24-bit PCM format for 2 audio solution
- 16/20/24-bit S/PDIF-OUT supports 44.1K/48K/96kHz sample rate
- Compatible with HD
- Meets Microsoft WHQL/WLP 2.0 audio requirements

The board provides 2 channels audio phone jacks on rear I/O port, Line-in/MIC-in ports for front I/O panel through optional cable.

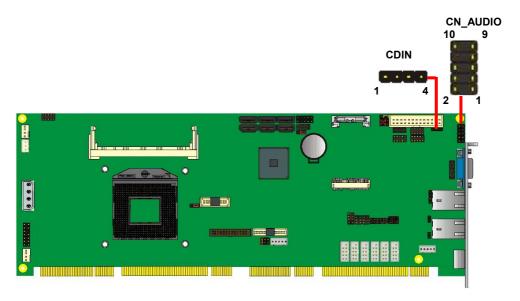

Connector: CN_AUDIO

Type: 10-pin (2×5) header (pitch = 2.54mm)



| Pin | Description | Pin | Description |
|-----|-------------|-----|----------------|
| 1 | MIC_L | 2 | Ground |
| 3 | MIC_R | 4 | N/C |
| 5 | Speaker_R | 6 | MIC Detect |
| 7 | SENSE | 8 | N/C |
| 9 | Speaker_L | 10 | Speaker Detect |

Connector: CDIN

Type: 4-pin header (pitch = 2.54mm)


| Pin | Description |
|-----|-------------|
| 1 | CD – Left |
| 2 | Ground |
| 3 | Ground |
| 4 | CD – Right |



2.10 <USB Interface>

FS-A75 integrates eight USB2.0 ports. The specifications of USB2.0 are listed below:

| Interface | USB2.0 |
|---------------|---------------|
| Controller | Intel® QM67 |
| Transfer Rate | Up to 480Mb/s |
| Voltage | 5V |

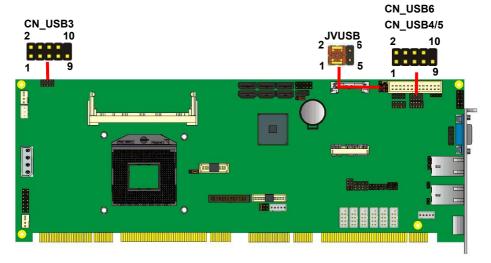

Connector: CN_USB3/4/5/6

Type: 10-pin (2×5) header (pitch = 2.54mm)

| Pin | Description | Pin | Description |
|-----|-----------------|-----|-----------------|
| 1 | VCC (5V_SB/ 5V) | 2 | VCC (5V_SB/ 5V) |
| 3 | Data0- | 4 | Data1- |
| 5 | Data0+ | 6 | Data1+ |
| 7 | Ground | 8 | Ground |
| 9 | Ground | 10 | N/C |

FS-A75 User's Manual

Connector: JVUSB

Type: 6-pin Power select jumper

| Pin | Description |
|-----------|-------------|
| 1-3 & 2-4 | 5V_SB |
| 3-5 & 4-6 | 5V |

Default: 1-3 & 2-4


Effective patterns of connection: 1-3 & 2-4 or 3-5 & 4-6



Warning: others cause damages

2.11 <Serial Port>

The board supports five RS232 serial port and one jumper selectable RS232/422/485 serial ports. The jumper JCSEL1 & JCSEL2 can let you configure the communicating modes for COM2.

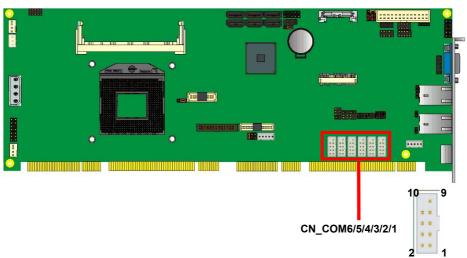


Connector: **COM1/3/4/5/6** Type: 9-Pin box header


| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | DCD | 2 | RXD |
| 3 | TXD | 4 | DTR |
| 5 | GND | 6 | DSR |
| 7 | RTS | 8 | CTS |
| 9 | RI | 10 | N/C |

Connector: **COM2**Type: 9-Pin box header

| Pin | Description | Pin | Description |
|-----|-----------------|-----|-----------------|
| 1 | DCD/422TX-/485- | 2 | RXD/422TX+/485+ |
| 3 | TXD/422RX+ | 4 | DTR/422RX- |
| 5 | GND | 6 | DSR |
| 7 | RTS | 8 | CTS |
| 9 | RI | 10 | N/C |

Setting RS-232 & RS-422 & RS-485 for COM2

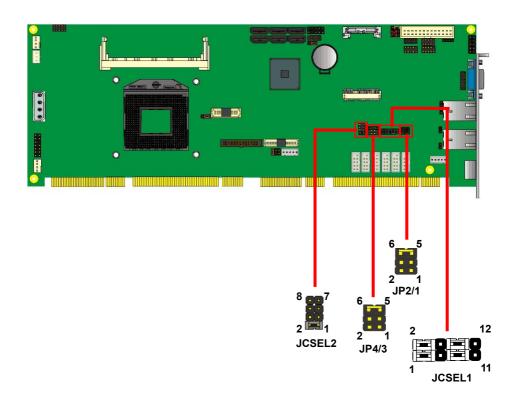

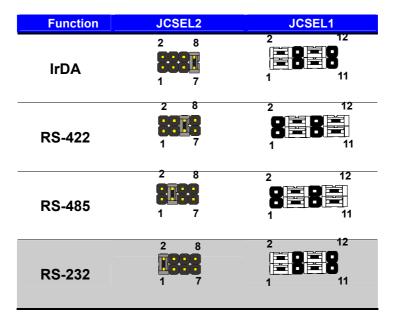

Default setting:

JCSEL1: (1-3, 2-4, 7-9, 8-10) JCSEL2: (1-2)

Jumper: JP1/JP2/JP3/JP4 (COM1/2/3/4)

Type: onboard 6-pin header

| Power Mode | JP1/2/3/4 |
|----------------------|-----------|
| Pin 9 with 5V Power | 1-2 |
| Pin 9 with 12V Power | 3-4 |
| Standard COM port | 5-6 |

Default setting:

Standard COM Port: (5-6)


2.12 <PCIE Mini Card and SIM Interface>

The board provides two PCIE mini card sockets and a SIM socket.

MINI CARD is the first Mini-PCle slot for long size Mini-PCle cards.

Please be noted that the MPX-SDVOD card must be placed in this slot. The MPX-SDVOD card will not work if it is placed in other slot.

Please also be noted that this slot is the only slot for MPX-SDVOX card but a customized BIOS is needed for the MPX-SDVOX card. Please contact Commell for customized BIOS for your MPX-SDVOX card.

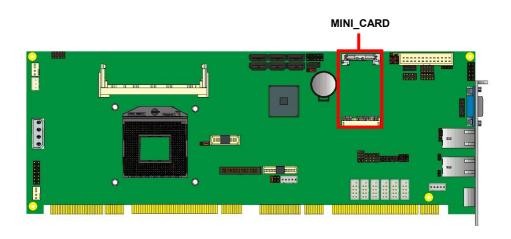

2.13 < GPIO and SMBUS Interface>

The board provides a programmable 8-bit digital I/O interface; you can use this general purpose I/O port for system control like POS or KIOSK.

Connector: CN_DIO


Type: 12-pin (6 x 2) header (pitch = 2.0mm)

| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | Ground | 2 | Ground |
| 3 | GP10 | 4 | GP14 |
| 5 | GP11 | 6 | GP15 |
| 7 | GP12 | 8 | GP16 |
| 9 | GP13 | 10 | GP17 |
| 11 | 5V | 12 | 12V |

Connector: CN_SMBUS


Type: 5-pin header for SMBUS Ports

| Pin | Description |
|-----|-------------|
| 1 | VCC |
| 2 | N/C |
| 3 | SMBDATA |
| 4 | SMBCLK |
| 5 | Ground |

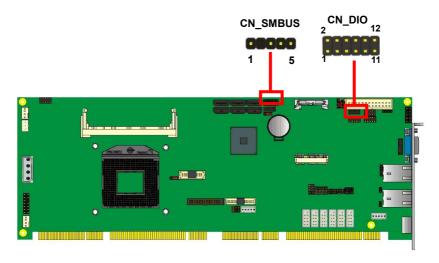

2.14 < Power Supply and Fan Interface >

The **FS-A75** provides a standard ATX power supply with **4-pin** ATX connector and the board provides one **4-pin** fan connector supporting smart fan for CPU cooler and one 4-pin cooler fan connectors for system and Northbridge chip. please connect this well before you finishing the system setup.

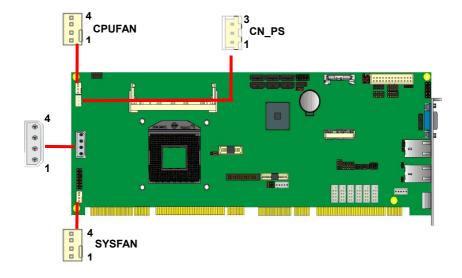

Connector: DC_IN

Type: 4-pin DC power connector

| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | +12V | 2 | Ground |
| 3 | Ground | 4 | +5V |

Connector: CPUFAN

Type: 4-pin fan wafer connector

| Pin | Description | Pin | Description |
|-----|---------------------|-----|-------------|
| 1 | Ground | 2 | +12V |
| 3 | Fan Speed Detection | 4 | Fan Control |

Connector: SYSFAN

Type: 3-pin fan wafer connector

| Pin | Description | Pin | Description |
|-----|---------------------|-----|-----------------|
| 1 | Ground | 2 | +12V |
| 3 | Fan Speed Detection | 4 | Will be defined |

Connector: **CN_PS**Type: 3-pin connector

| Pir | Description | Pin | Description | Pin | Description | n |
|-----|-------------|-----|-------------|-----|-------------|---|
| 1 | 5VSTBY | 2 | Ground | 3 | PSON | |


2.15 <Switch and Indicator>

The **JFRNT** provides front control panel of the board, such as power button, reset and beeper, etc. Please check well before you connecting the cables on the chassis.

Connector: **JFRNT**

Type: onboard 14-pin (2 x 7) 2.54-pitch header

| Function | Signal | P | IN | Signal | Function |
|----------|--------|----|----|---------|----------|
| IDE LED | HDLED+ | 1 | 2 | PWRLED+ | Power |
| IDE LED | HDLED- | 3 | 4 | N/C | LED |
| Reset | Reset+ | 5 | 6 | PWRLED- | LED |
| Reset | Reset- | 7 | 8 | SPK+ | |
| | N/C | 9 | 10 | N/C | Speaker |
| Power | PWRBT+ | 11 | 12 | N/C | Speaker |
| Button | PWRBT- | 13 | 14 | SPK- | |

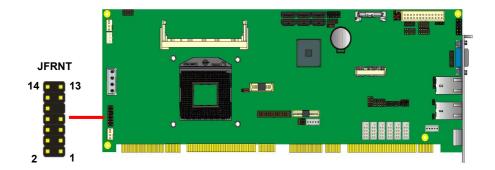

Chapter 3 < System Setup>

3.1 < Audio Configuration>

The board integrates Intel® QM67 with REALTEK® ALC888 code. It can support 2-channel sound under system configuration. Please follow the steps below to setup your sound system.

- 1. Install REALTEK HD Audio driver.
- 2. Lunch the control panel and Sound Effect Manager.



3. Select Speaker Configuration




3.2 < Display Properties Setting>


Based on Intel QM67 with HD Graphic, the board supports two DACs for display device as different resolution and color bit.

Please install the Intel Graphic Driver before you starting setup display devices.

1. Click right button on the desktop to lunch display properties

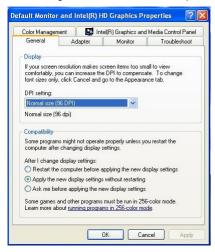


2. Click **Advanced** button for more specificity setup.

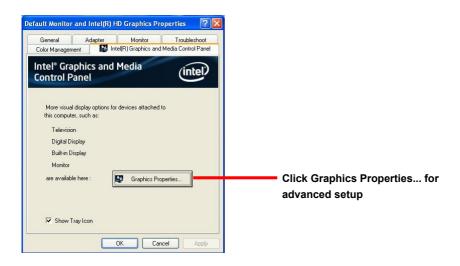

3. This setup options can let you define each device settings.


Click Monitor to setup the CRT monitor for Resolution and Refresh Rate

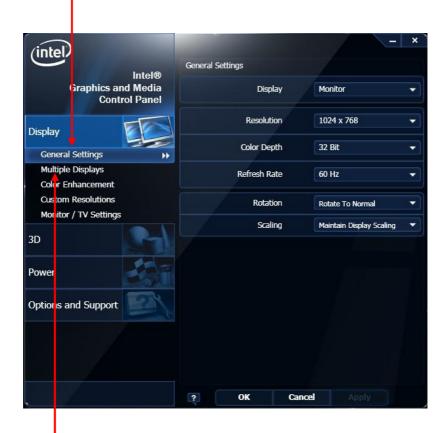

Click Intel® Dual Display
Clone to setup the dual
display mode as same screen

3.3 <SATA configuration>

SATA Mode:

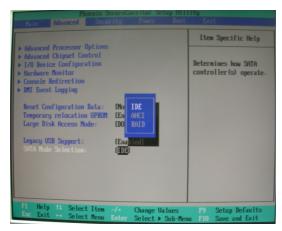

This option can let you select whether the Serial ATA hard drives would work under normal IDE mode or RAID mode. The RAID mode need more than one HDD is applied.

3.4 <SATA RAID Configuration>

The board integrates Intel® QM67 PCH with RAID function for Serial ATA drives, and supports the configurations below:

RAID 0 (Stripping): Two hard drives operating as one drive for optimized data R/W performance. It needs two unused drives to build this operation.

RAID 1 (Mirroring): Copies the data from first drive to second drive for data security, and if one drive fails, the system would access the applications to the workable drive. It needs two unused drives or one used and one unused drive to build this operation. The second drive must be the same or lager size than first one.

RAID 5 (striping with parity)

A RAID 5 array contains three or more hard drives where the data is divided into manageable blocks called strips. Parity is a mathematical method for recreating data that was lost from a single drive, which increases fault-tolerance. The data and parity are striped across all the hard drives in the array. The parity is striped in a rotating sequence to reduce bottlenecks associated with the parity calculations.

RAID 10 (RAID 0+1)

A RAID 10 array uses four hard drives to create a combination of RAID levels 0 and 1. The data is striped across a two-drive array forming the RAID 0 component. Each of the drives in the RAID 0 array is then mirrored by a RAID 1 component.

Intel Matrix Storage Technology: This technology would allow you to use RAID 0+1 mode on only two drives (4 drives needed on traditional RAID 0+1). It will create two partitions on each hard drive to simulate RAID 0 and RAID 1. It also can let you modify the partition size without re-formatted.

For more information of Intel Matrix Storage Technology, please visit Intel's website.

If you need to install an operation system on the RAID set, please use the driver disk attached in the package when it informs you to obtain the RAID drivers.

```
Intel(R) Rapid Storage Technology - Option ROM
        Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.
                                                  Recovery Volume Options
            Delete RAID Volume
                                                  Acceleration Options
            Reset Disks to Non-RAID
                         =[ DISK/VOLUME INFORMATION ]=
RAID Volumes:
None defined.
Physical Devices:
                                                       Size Type/Status(Vol ID)
Port Device Model
                      Serial #
                                                    232.8GB Non-RAID Disk
232.8GB Non-RAID Disk
                               [ESC]-Exit
                                                      [ENTER]-Select Menu
```

Please press **<CTRL+I>** to enter the RAID configuration menu.

You can setup the RAID under operation system for Microsoft® Windows XP SP1, please install the Intel® Application Accelerator Ver.4.5 later to support RAID configuration with Intel® Matrix Storage Technology.

Chapter 4 <BIOS Setup>

The motherboard uses the Phoenix BIOS for the system configuration. The Phoenix BIOS in the single board computer is a customized version of the industrial standard BIOS for IBM PC AT-compatible computers. It supports Intel x86 and compatible CPU architecture based processors and computers. The BIOS provides critical low-level support for the system central processing, memory and I/O sub-systems.

The BIOS setup program of the single board computer let the customers modify the basic configuration setting. The settings are stored in a dedicated battery-backed memory, NVRAM, retains the information when the power is turned off. If the battery runs out of the power, then the settings of BIOS will come back to the default setting.

The BIOS section of the manual is subject to change without notice and is provided here for reference purpose only. The settings and configurations of the BIOS are current at the time of print, and therefore they may not be exactly the same as that displayed on your screen.

To activate CMOS Setup program, press < DEL > key immediately after you turn on the system. The following message "Press DEL to enter SETUP" should appear in the lower left hand corner of your screen. When you enter the CMOS Setup Utility, the Main Menu will be displayed as **Figure 4-1**. You can use arrow keys to select your function, press < Enter > key to accept the selection and enter the sub-menu.

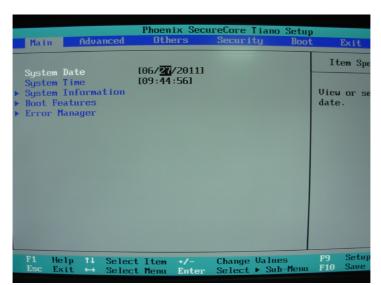


Figure 4-1 CMOS Setup Utility Main Screen

| FS-A75 User's Manual | |
|----------------------|-------------------------------|
| | (This page is left for blank) |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Appendix A <I/O Port Pin Assignment>

A.1 <Serial ATA Port>

Connector: SATA1/2/3/4/5/6

Type: 7-pin wafer connector



| 1 | 2 | 3 | 4 | 5 | 6 | 7 |
|-----|------------|------------|-----|------------|------------|-----|
| GND | RSATA_TXP1 | RSATA_TXN1 | GND | RSATA_RXN1 | RSATA_RXP1 | GND |

A.2 <IrDA Port>

Connector: CN_IR

JCSEL1 must jump to "SIR"

Type: 5-pin header for SIR Ports

| Pin | Description | | | |
|-----|-------------|--|--|--|
| 1 | VCC | | | |
| 2 | N/C | | | |
| 3 | IRRX | | | |
| 4 | Ground | | | |
| 5 | IRTX | | | |



A.3 <VGA Port>

Connector: CRT

Type: 15-pin D-sub female connector on bracket



| Pin | Description | Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|-----|-------------|
| 1 | RED | 6 | Ground | 11 | N/C |
| 2 | GREEN | 7 | Ground | 12 | DDCDA |
| 3 | BLUE | 8 | Ground | 13 | HSYNC |
| 4 | N/C | 9 | N/C | 14 | VSYNC |
| 5 | Ground | 10 | Ground | 15 | DDCCLK |

A.4 <LAN Port>

Connector: RJ45

Type: RJ45 connector with LED on bracket



| Pin | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|-------------|------|------|------|------|------|------|------|------|
| Description | MIO+ | MIO- | MI1+ | MI2+ | MI2- | MI1- | MI3+ | MI3- |

A.5 <LAN LED Port>

Connector: JSPD1/2

Type: 5-pin header for LAN Speed LED connector

When Lan speed 10/100Mbps

| Pin | Description |
|-----|-------------|
| 1 | LED- |
| 2 | LED+ |

When Lan speed 1Gbps


| Pin | Description |
|-----|-------------|
| 1 | LED+ |
| 2 | LED- |



Connector: JATC1/2

Type: 5-pin header for LAN Activity LED connector

| Pin | Description |
|-----|-------------|
| 1 | LED- |
| 2 | LED+ |

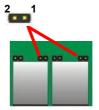

A.6 < Parallel Port>

Connector: LPT

Type: 26-Pin box header



| Pin | Description | Pin | Description |
|-----|-------------|-----|-------------|
| 1 | -PSTB | 14 | AFD- |
| 2 | PRO0 | 15 | ERR- |
| 3 | PRO1 | 16 | INT- |
| 4 | PRO2 | 17 | SLIN- |
| 5 | PRO3 | 18 | Ground |
| 6 | PRO4 | 19 | Ground |
| 7 | PRO5 | 20 | Ground |
| 8 | PRO6 | 21 | Ground |
| 9 | PRO7 | 22 | Ground |
| 10 | ACK- | 23 | Ground |
| 11 | BUSY | 24 | Ground |
| 12 | PE | 25 | Ground |
| 13 | SLCT | 26 | N/C |

Appendix B <Flash BIOS>

B.1 <Flash Tool>

The board is based on Phoenix BIOS and can be updated easily by the BIOS auto flash tool. You can download the tool online at the address below:

http://www.commell.com.tw/Support/Product%20Technical%20Support/FS-A7 5.htm

File name of the tool is "Phlash.exe", it's the utility that can write the data into the BIOS flash ship and update the BIOS.

B.2 < Flash BIOS Procedure>

- 1. Please make a bootable floppy disk.
- 2. Get the last .bin files you want to update and copy it into the disk.
- 3. Copy Phlash.exe to the disk.
- 4. Power on the system and flash the BIOS.

(Example: C:/Pflash XXX.bin /bbl /cvar /sa)

5. Restart the system.

Any question about the BIOS re-flash please contact your distributors or visit the web-site at below:


http://www.commell.com.tw/Support/Support.htm

Appendix C <System Resources> C.1 <I/O Port Address Map>


| | Ing | out/output (IO) | · |
|---|-----|-----------------------|---|
| | | [00000000 - 0000001F] | Direct memory access controller |
| | 👰 | [00000000 - 00000CF7] | PCI bus |
| 1 | 👰 | [00000020 - 00000021] | Programmable interrupt controller |
| i | 👰 | [00000024 - 00000025] | Programmable interrupt controller |
| | 👰 | [00000028 - 00000029] | Programmable interrupt controller |
| | | [0000002C - 0000002D] | Programmable interrupt controller |
| ŀ | 夏 | [0000002E - 0000002F] | Motherboard resources |
| | 9 | [00000030 - 00000031] | Programmable interrupt controller |
| | | [00000034 - 00000035] | Programmable interrupt controller |
| ŀ | | [00000038 - 00000039] | Programmable interrupt controller |
| | | [0000003C - 0000003D] | Programmable interrupt controller |
| ŀ | | [00000040 - 00000043] | System timer |
| | | [0000004E - 0000004F] | Motherboard resources |
| | | [00000050 - 00000053] | System timer |
| | - | [00000060 - 00000060] | Standard 101/102-Key or Microsoft Natural PS/2 Keyboard |
| | | [00000061 - 00000061] | Motherboard resources |
| | | [00000063 - 00000063] | Motherboard resources |
| | - | [00000064 - 00000064] | Standard 101/102-Key or Microsoft Natural PS/2 Keyboard |
| | | [00000065 - 00000065] | Motherboard resources |
| | | [00000067 - 00000067] | Motherboard resources |
| | | [00000070 - 00000070] | Motherboard resources |
| | | [00000070 - 00000077] | System CMOS/real time clock |
| | | [00000080 - 00000080] | Motherboard resources |
| | - 3 | [00000081 - 00000091] | Direct memory access controller |
| | 3 | [00000092 - 00000092] | Motherboard resources |

```
[00000093 - 0000009F] Direct memory access controller
   [000000A0 - 000000A1] Programmable interrupt controller
  [000000A4 - 000000A5] Programmable interrupt controller
  [000000A8 - 000000A9] Programmable interrupt controller
  [000000AC - 000000AD] Programmable interrupt controller
  [000000B0 - 000000B1] Programmable interrupt controller
  [000000B2 - 000000B3] Motherboard resources
 🚽 [000000B4 - 000000B5] Programmable interrupt controller
 🚽 [000000B8 - 000000B9] Programmable interrupt controller
 🖳 [000000BC - 000000BD] Programmable interrupt controller
 [000000C0 - 000000DF] Direct memory access controller
 [000000F0 - 000000F0] Numeric data processor.
 🕎 [00000274 - 00000277] ISAPNP Read Data Port
 🕎 [00000279 - 00000279] ISAPNP Read Data Port
  [000002E8 - 000002EF] Communications Port (COM4)
[00000378 - 0000037F] Printer Port (LPT1)
 [000003B0 - 000003BB] Intel(R) HD Graphics Family
 [000003C0 - 000003DF] Intel(R) HD Graphics Family
[000003F8 - 000003FF] Communications Port (COM1)
 🖳 [00000400 - 00000453] Motherboard resources
 [00000454 - 00000457] Motherboard resources
 [00000458 - 0000047F] Motherboard resources
 👤 [000004D0 - 000004D1] Programmable interrupt controller
[000004E8 - 000004EF] Communications Port (COM6)
[000004F8 - 000004FF] Communications Port (COM5)
🕎 [00000500 - 0000057F] Motherboard resources
 🖳 [00000680 - 0000069F] Motherboard resources
🕎 [00000A79 - 00000A79] ISAPNP Read Data Port
  [00000D00 - 0000FFFF] PCI bus
 👤 [00001000 - 0000100F] Motherboard resources
 [0000164E - 0000164F] Motherboard resources
[00002000 - 0000201F] Intel(R) 82574L Gigabit Network Connection
🕎 [00002000 - 00002FFF] Intel(R) 6 Series/C200 Series Chipset Family PCI Express Root Port 2 - 1C12
[00003000 - 0000301F] Intel(R) 82574L Gigabit Network Connection #2
👰 [00003000 - 00003FFF] Intel(R) 6 Series/C200 Series Chipset Family PCI Express Root Port 1 - 1C10
  [00004000 - 0000403F] Intel(R) HD Graphics Family
```

FS-A75 User's Manual

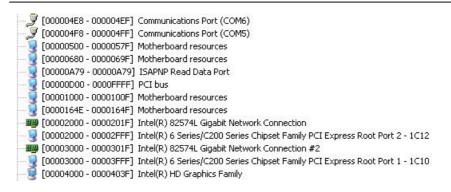

C.2 < Memory Address Map>

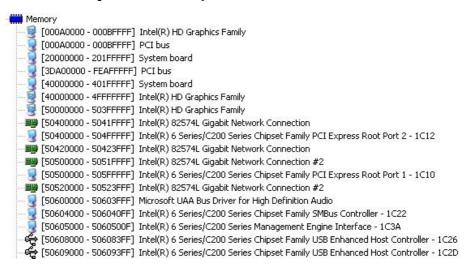

C.3 <System DMA & IRQ Resources>

DMA:

Direct memory access (DMA)

🔙 🖳 4 Direct memory access controller

IRQ:



Appendix D < Programming GPIO's>

The GPIO'can be programmed with the MSDOS debug program using simple IN/OUT commands. The following lines show an example how to do this.

GPIO0.....GPIO7 bit0.....bit7

-o 2 E 87 ;enter configuration

-o 2E 87

-o 2E 07

-o 2F 09 ;enale GPIO function

-o 2E 30

-o 2F 02 ;enable GPIO configuration

-o 2E F0

-o 2F xx ;set GPIO as input/output; set '1' for input,'0'for

output

-o 2E F1

-o 2F xx ;if set GPIO's as output,in this register its value can

be set

Optional:

-o 2E F2

-o 2F xx ; Data inversion register ; '1' inverts the current valus

of the bits, '0' leaves them as they are

-o 2E 30


-o 2F 01 : active GPIO's

For further information, please refer to Winbond W83627DHG-P datasheet.

Appendix E < Programming Watchdog Timer >

The watchdog timer makes the system auto-reset while it stops to work for a period.

The integrated watchdog timer can be setup as system reset mode by program.

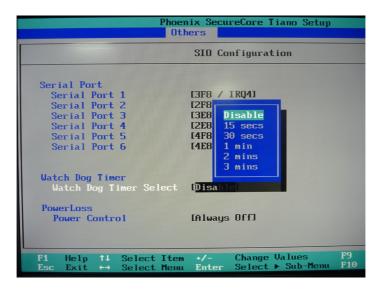

Timeout Value Range

- 1 to 255
- Second or Minute

Program Sample

Watchdog timer setup as system reset with 5 second of timeout

| 2E, 87 | |
|--------|------------------|
| 2E, 87 | |
| 2E, 07 | |
| 2F, 08 | Logical Device 8 |
| 2E, 30 | Activate |
| 2F, 01 | |
| 2E, F5 | Set as Second* |
| 2F, 00 | |
| 2E, F6 | Set as 5 |
| 2F, 05 | |

^{*} Minute: bit 3 = 1: Second: bit 3 = 0

You can select Timer setting in the BIOS, after setting the time options, the system will reset according to the period of your selection.

Contact Information

Any advice or comment about our products and service, or anything we can help you please don't hesitate to contact with us. We will do our best to support you for your products, projects and business.

Taiwan Commate Computer Inc.

19F., No.94, Sec. 1, Xintai 5th Rd., Xizhi Dist., New

Taipei City 22102, Taiwan

TEL +886-2-26963909 FAX +886-2-26963911

Website http://www.commell.com.tw

E-Mail <u>info@commell.com.tw</u> (General Information)

tech@commell.com.tw (Technical Support)

Commell is a brand name of Taiwan commate computer Inc.

